


# Roller Chase (RCX) Assembly Instructions

**WARNING!** Do not begin stretching until you have completed instructions.

## Guidelines on outside of frame

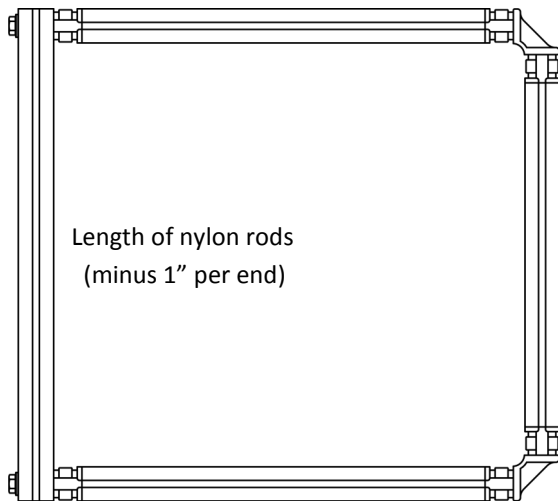

Tensioning guide line  
on top of roller


Length of nylon rods  
(minus 1" per end)

Locking groove towards inside of frame

## Square Tube Parts List

- 3 rollers
- 1 square tube
- 2 anti-compression bushings
- 8 nylon rods (varied sizes)
- 2 corners
- 6 washers
- 6 bolts

## Guidelines on outside of frame

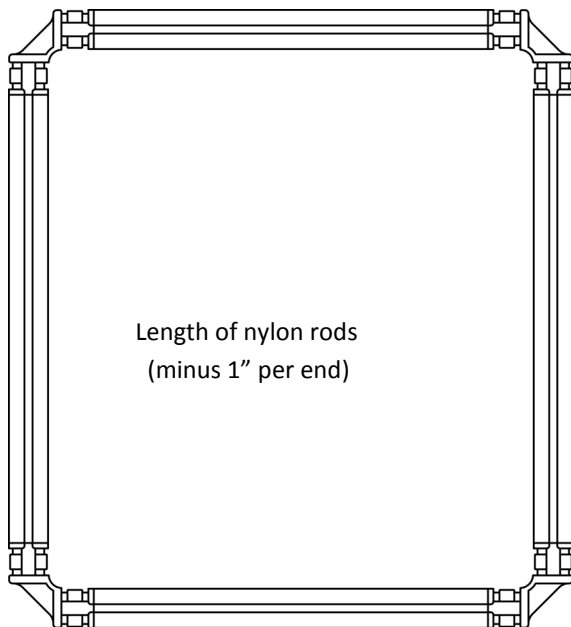

Tensioning guide line  
on top of roller

Length of nylon rods  
(minus 1" per end)

Locking groove towards inside of frame

## All 4 Roller Parts List

- 4 rollers
- 8 nylon rods (varied sizes)
- 4 corners
- 8 washers
- 8 bolts

## Instructions

Assemble the frame with the locking groove facing down. For automatic corner softening, cut nylon rods shorter than the length of the roller and round ends with pencil sharpener or sandpaper. Then turn the frame over. **REMEMBER**, the guide lines next to the locking groove should be on the outside of the frame after assembly is completed.