

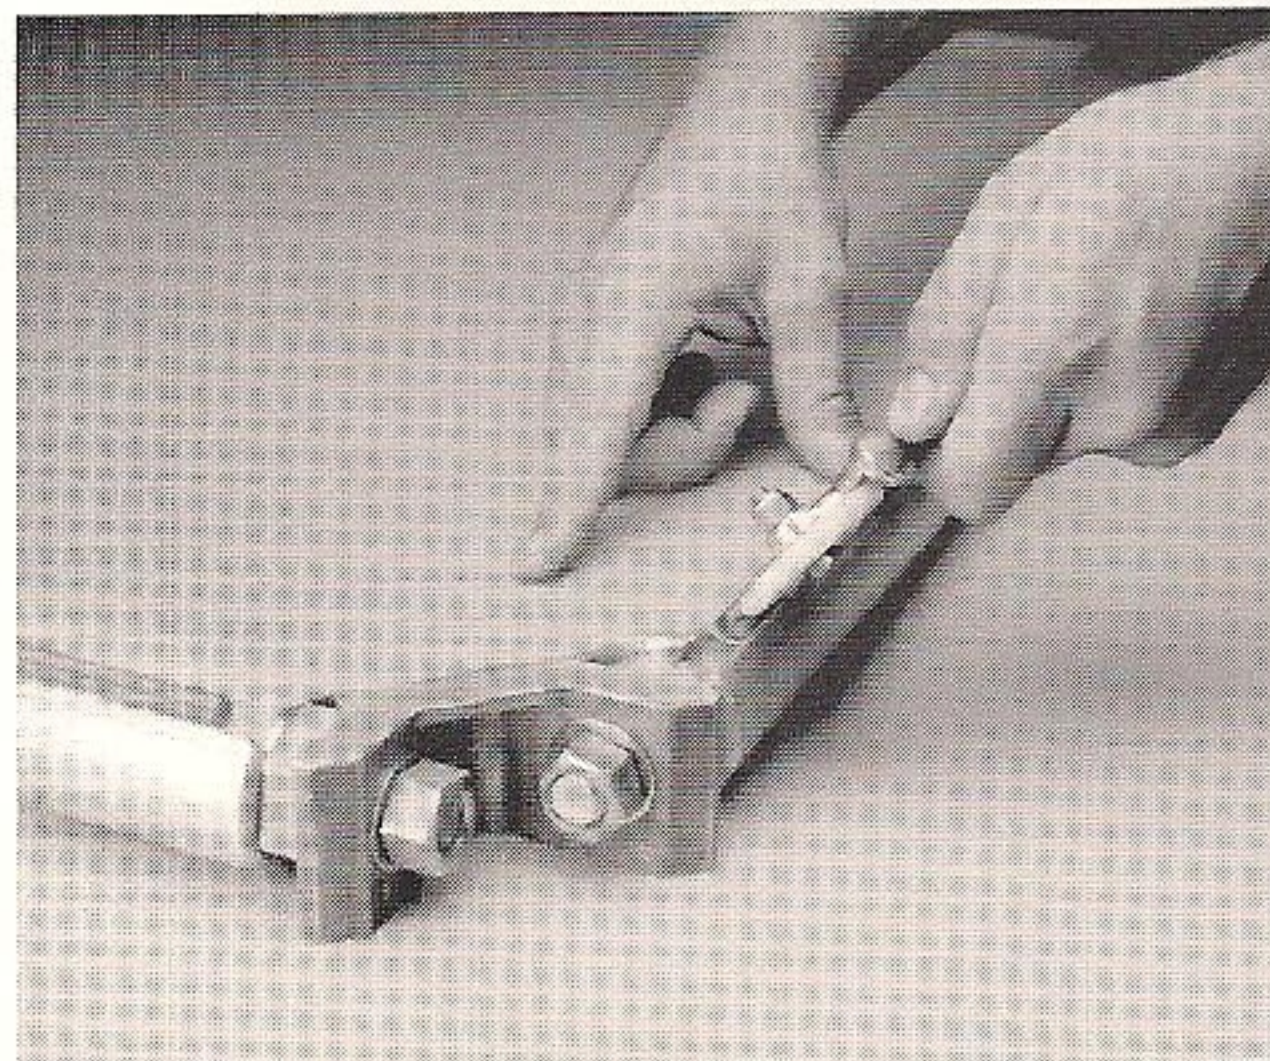
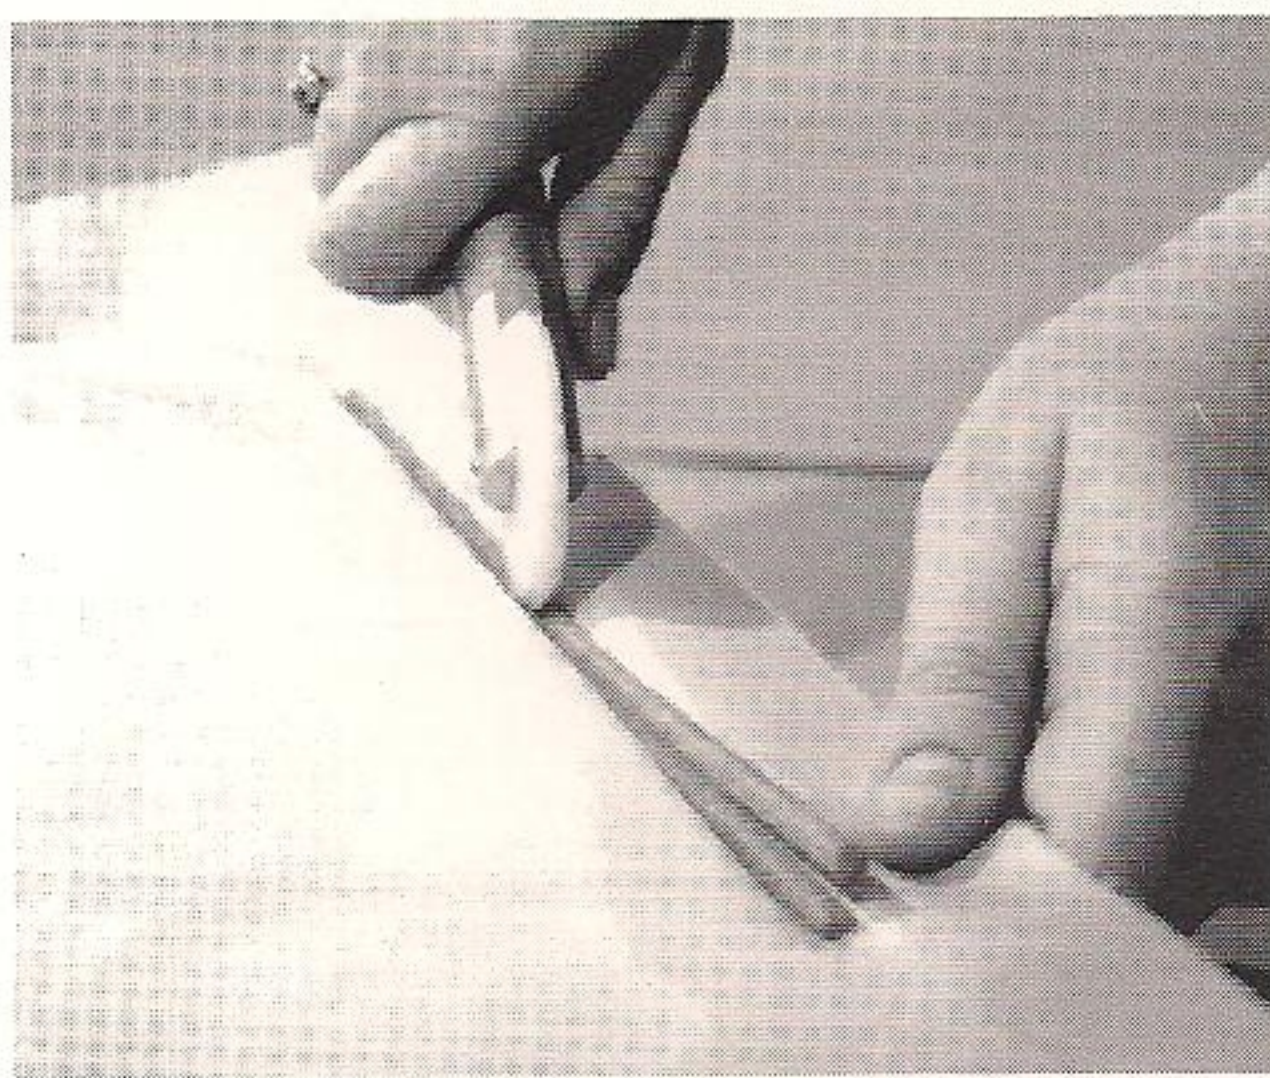
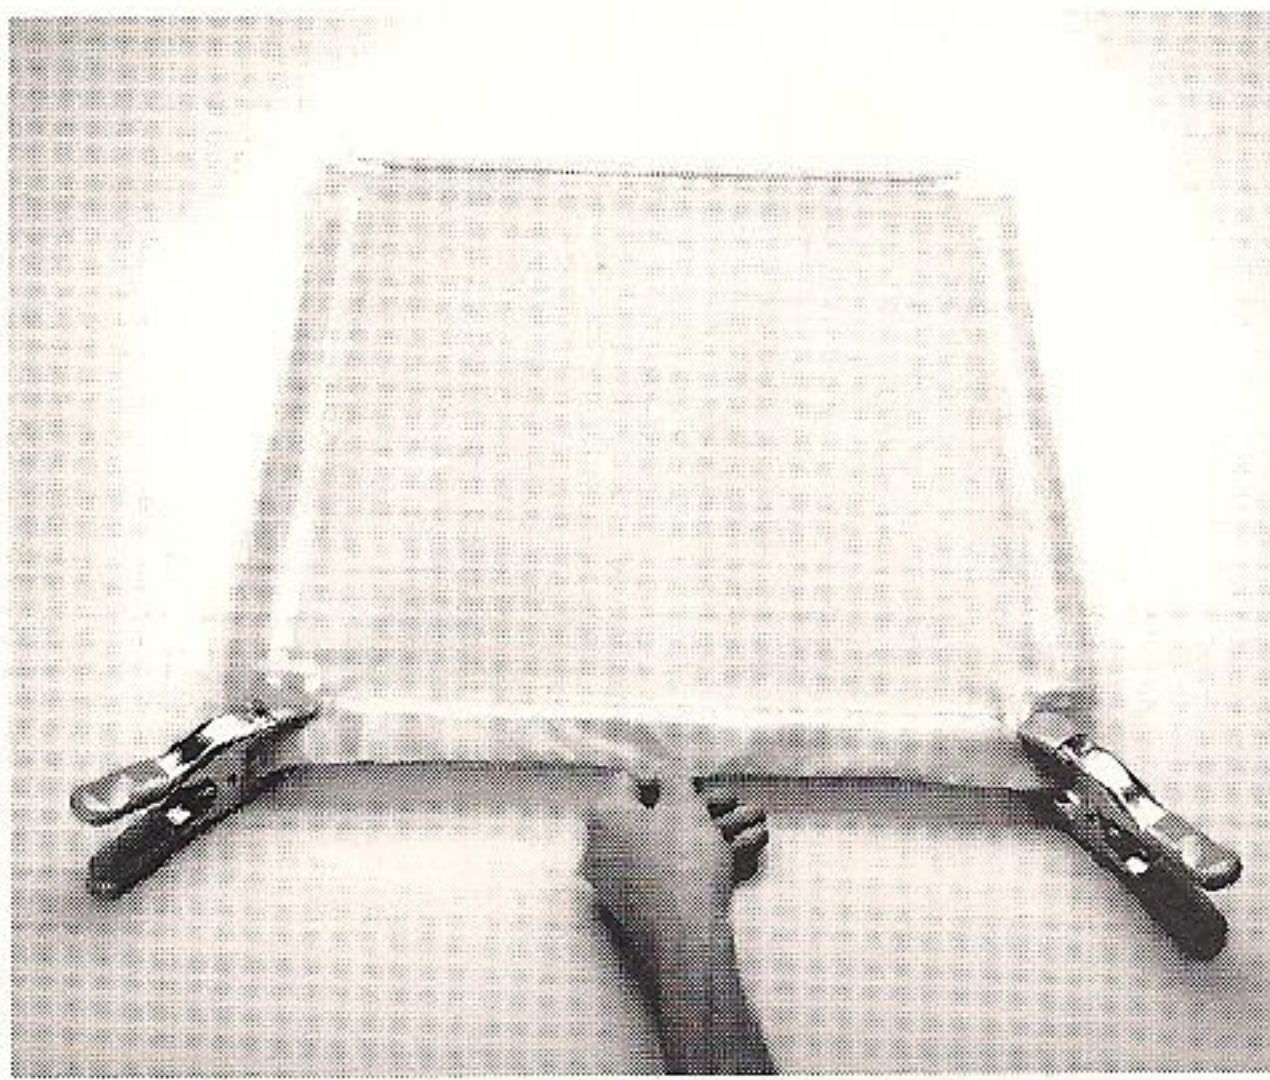


# Fabric Installation

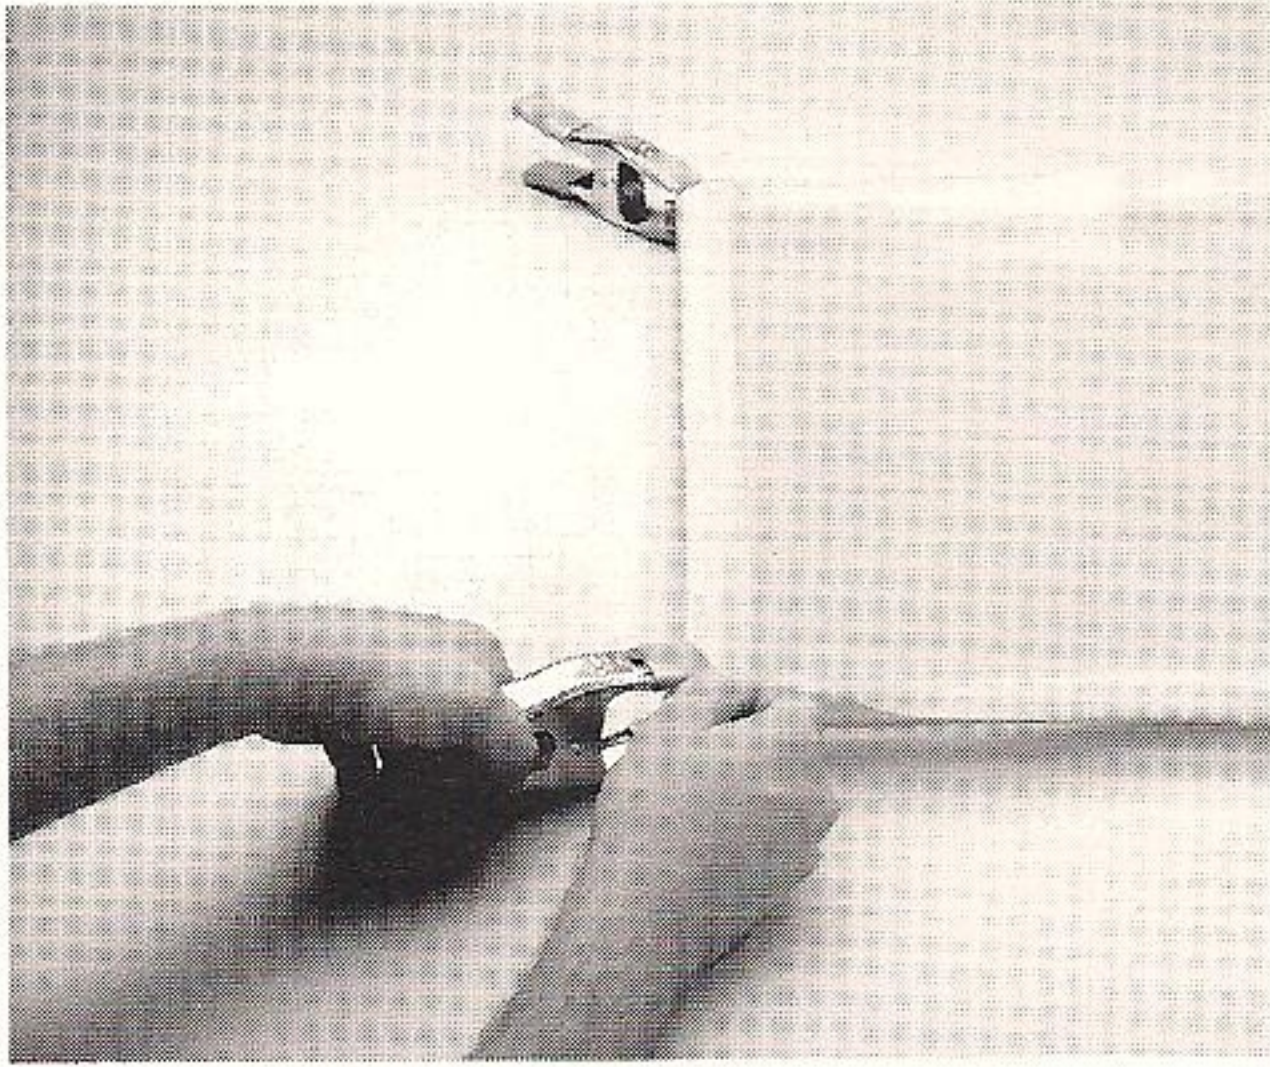

Cut lock rods approximately 1" shorter on each end of roller.

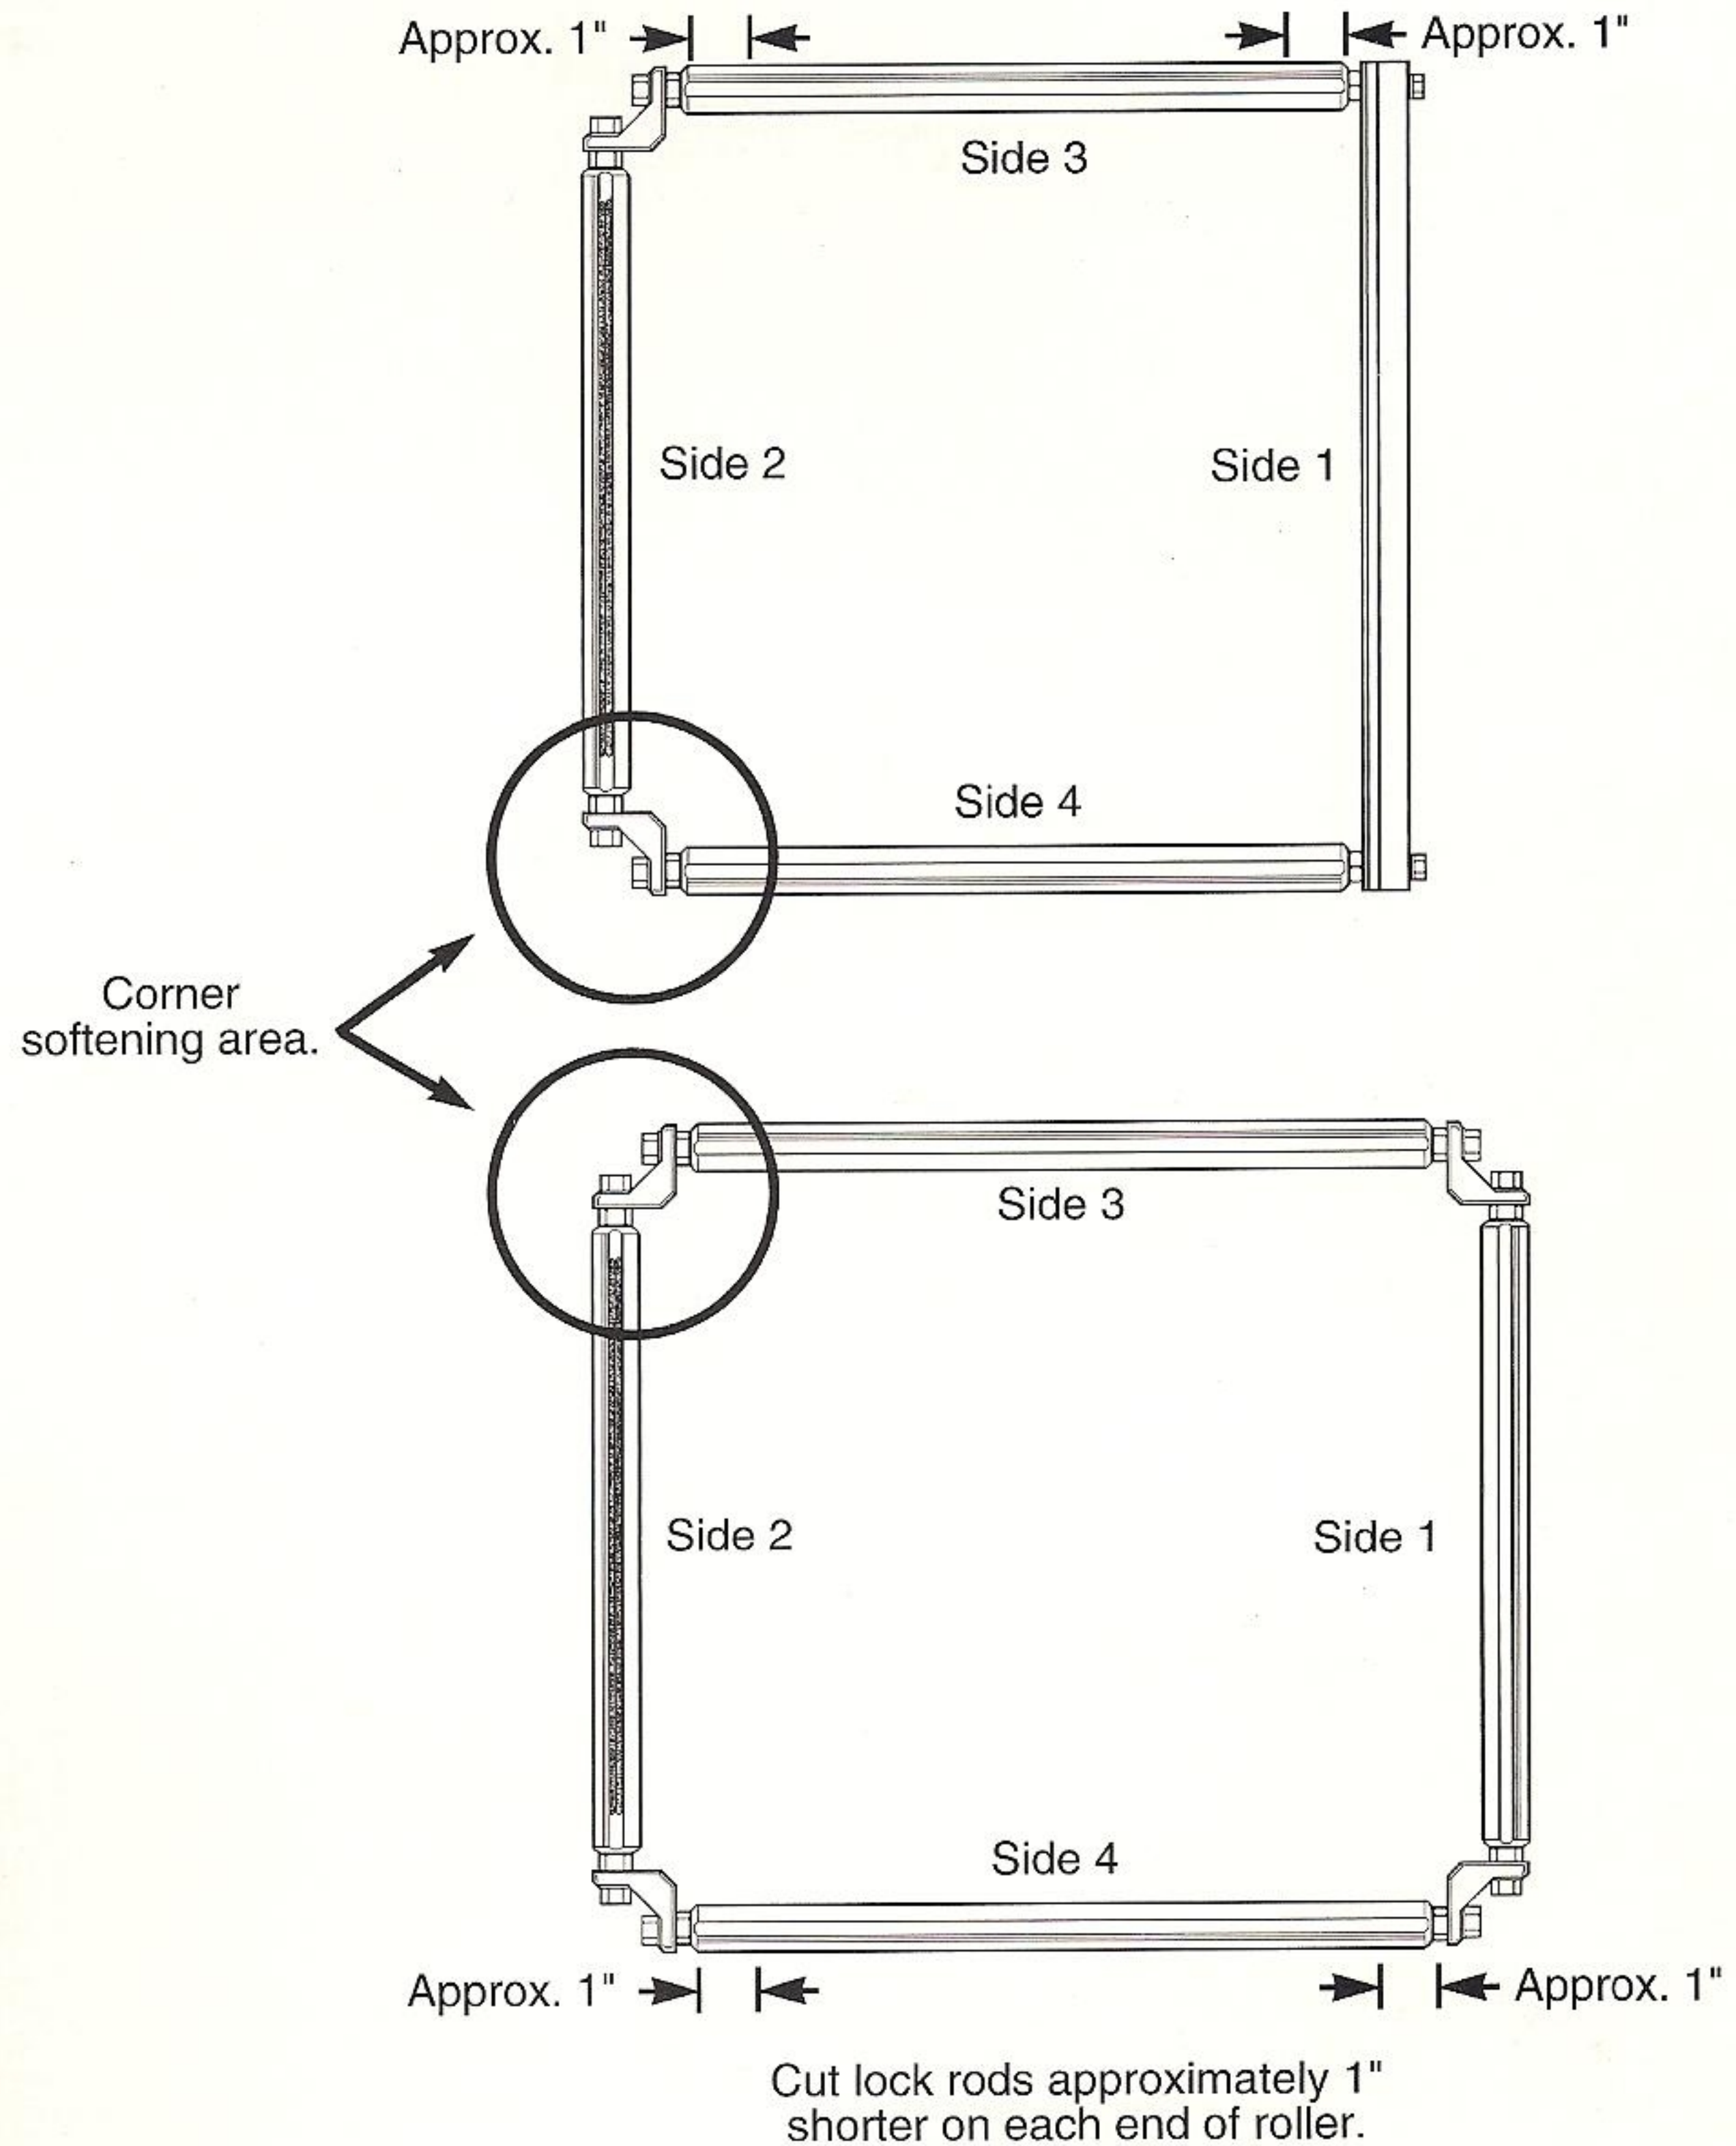

## Steps

1. Cut/tear fabric 1" larger than frame on all four sides.
2. Clamp fabric straight from end to end on side #1.
3. Lock fabric with rods. Start in the center, snap both rods in at the same time with the inside rod ahead of the outside rod. Lock rods in with fabric insertion tool in both directions from the center.
4. Repeat steps 2 - 3 for the remaining sides.
5. Soften corners on fabric above 200 threads per inch or at tensions above 30 n/cm by placing thumb on top of locking rods 2" to 3" in from the end. Pull up on excess fabric pulling rods out of channel. Push down on inside fabric, softening corners. Replace rods in channel with fabric insertion tool.